 
 
 
 
 
 


No	Name	Accessories	Number
A	Back panel		1
B	Left side		1
C	Right side		1
D	Door frame		1
E	Top panel		1
F	Bottom shelf		1
G	Middle wrist		1
H	Lower middle side		1
I	Upper middle side		1
J	Left clothes rail		2
K	Right clothes rail		2
L	Left clapboard		2
M	Right clapboard		2
N			
O	screw		28
P			

