

Instruction Manual

of Automatic Alternative Current Electrical Power Regulator



Rev: 02; Effective From June,25th,2022

Zhejiang DELIXI Electrical Co., Ltd.

Add.: #155,Zhandong Rd.,Liushi town, Yueqing, Zhejiang province, China

Tel: (86-577)6177 8888

CATALOGUE

1 Equipment description	3
2 Equipment installation	4
3 Operation of the machine	6
4 Electrical schematic diagram	7

1 Equipment description

1-1 Use of equipment

This equipment is designed and manufactured by Co., Ltd., and it is used for stabilizing the AC electrical power.


1-2 Equipment parameter

1.2.1 General Parameter

Equipment model	SJW 15kVA
Electrical power supply input	AC304~456, 19KW
Electrical power supply output	AC380V, 19KW
Equipment weight(Net)	60KG
Equipment Dimension(mm)	370*350*720(LWH)
Environment temperature	10~35℃
Environment humidity	≤70%

1.2.2 Technical Parameter

model num	ber		SJW	
power rating	power rating kVA		1.5~30	45~60
Output Stable pressure accu		icy \	380±4%	
		onV	184 ± 4 (Phase voltage) (not set for conventional products) can be formulated	
voltage	overvoltage crowbar	V	246±	
input voltage r	ange	V	260~430	304~456
reaction time		s	< 1 (When the input voltage changes by 10%)	
temperature ris	se .	K <80		
Frequency		Hz	50/60	
insulation resistance $m{M}\Omega$		≥5		
withstand volta	withstand voltage V/5s 1500			
efficiency	efficiency >92%			
Maximum rate	d current	A	2.3(1.5kVA)、 4.6(3kVA)、 6.8(4.5kVA)、 9.1(6kVA) 13.7(9kVA)、 22.8(15kVA)、 30.4(20kVA)、 45.6(30kVA) 68(45kVA)、 91(60kVA)	
operative norn	1		Q/DLX155	
litterae credentiales CE				

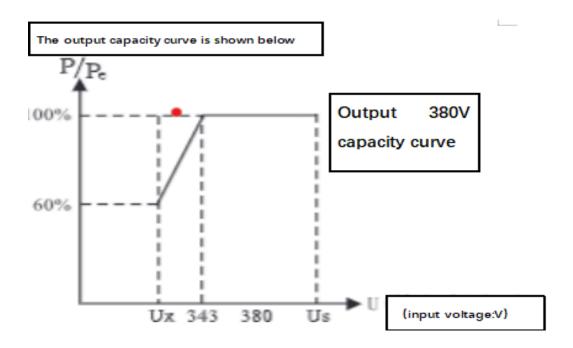



2 Equipment installation

When installing the equipment, pay attention to adjust the height of the feet to keep the equipment level. The installation site should pay attention to leaving the necessary space (at least 0.5meter) for equipment heat radiation.

2.1 Installation steps

- 2.1.1 Before connecting the input and output cables, **YOU MUST MAKE SURE THE POWER SWITCH IS TURNED OFF FIRSTLY**;
- 2.1.2 Remove the cover in the back of machine;
- 2.1.3 Connect the ground wire first, then connect the power input and output cable as the shown note, then put on the cover.

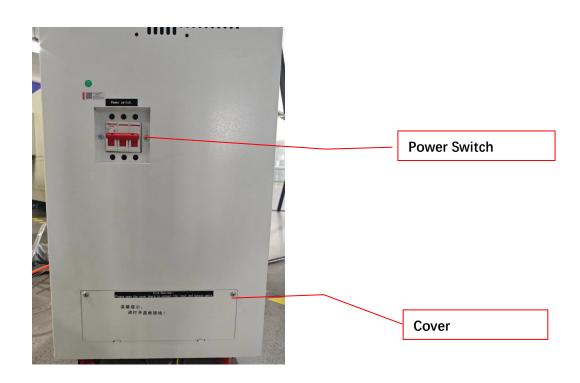

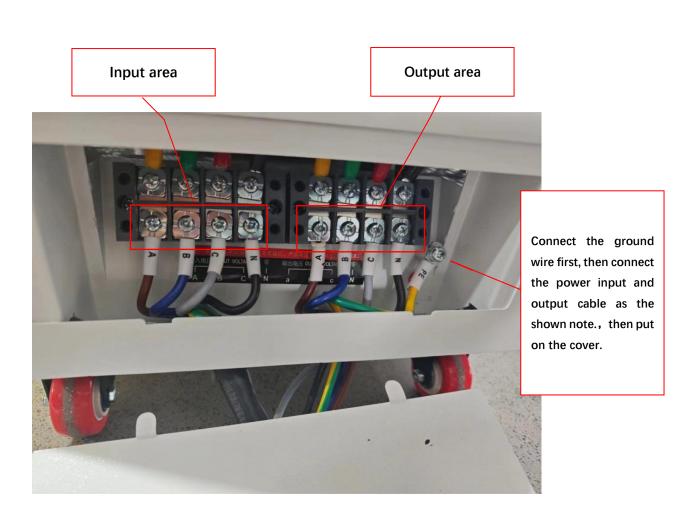


3. Operation of the machine

Turn on the power switch on the back of machine.

The machine front panel will display the Input and Output voltage.

If you need power off the machine, please turn off the power switch on the back of machine.

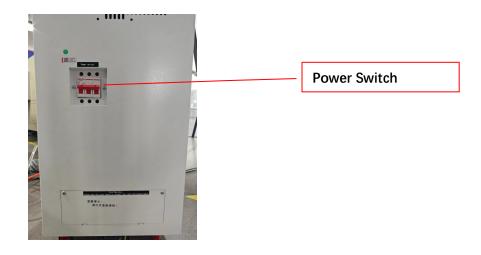



4. Electrical Schematic Diagram

