


CWFL-800、1000、1500

Industrial Chiller

User Manual

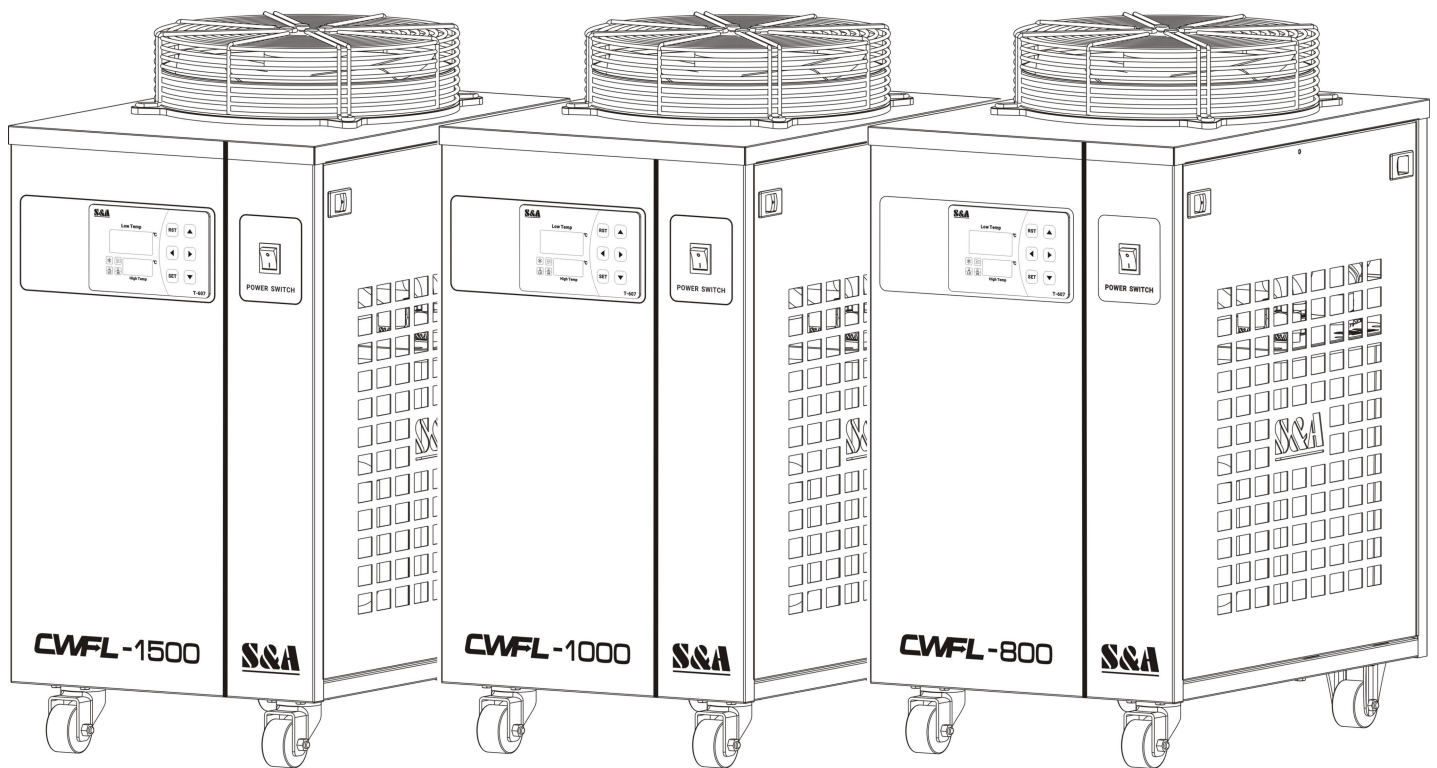

FOREWORD

Thanks for your purchase of our product. Please read this manual carefully before using and keep it properly so that you can refer to it whenever you need information.

This manual is not a quality guarantee. Our company reserves the right to the interpretation of the correction of misprint and improperly described information and product improvement. The revised content will be edited into the reprinted user manual without prior notice.

GUANGZHOU TEYU ELECTROMECHANICAL CO., LTD.

Add: No.50, Zhongchuang Road, Zhongcun town, Panyu District,

Guangzhou, China

Zip code: 511495

Email address: marketing@teyu.com.cn

Tel: +86-20-89301885 89301886


Fax: +86-20-84309967










CONTENTS


Notice	4
I. Overview	7
II. Model Illustration	7
III. Product Outlines & Parts	8
IV. Installation	9
V. Storage Instructions	13
VI. Operating States &Parameters Adjustment	14
VII. Alarm & Output Terminal	16
VIII. Maintenance	17
IX. Simple Troubleshooting	18
Attachment – Schematic	19






Notice


In order to ensure your personal safety and avoid property loss, you must pay attention to this manual, but not limited to the following warning notices. General electric knowledge and safety standards should also be followed.





 **DANGER** Failure to take safety measures will result in death or serious personal injury.










Notice		Operation Guideline
 Must-do	The Operation should be carried out by professional technicians	Handling, installation of pipes, electrical, operation, maintenance, overhaul and other operations must be carried out by personnel with professional knowledge.
 Forbidden	It is forbidden to be used beyond the range of specification	It is forbidden to use the equipment beyond the range of manual specifications in order to avoid equipment damage, injury, fire, electric shock and other major accidents.
 Forbidden	It is forbidden to be used in the explosive environment	It cannot be installed in dangerous places with flammable gas.
 Must-do	Electrical connection	a) The power supply must conform to the standard indicated in the nameplate or the manual; b) Use the standard cable, and select the standard wire diameter; c) The grounding wire must be installed and the connection must be reliable; otherwise, it will cause an electric shock or fire.
	It is forbidden to operate the equipment without a cover	There are live parts inside the machine. It is forbidden to operate without a cover, as there is a risk of electric shock.
	Water-proof	Do not allow the equipment to be drenched or immersed in water, otherwise there may be a risk of short circuit and electric shock.
 Must-do	Maintenance and repair	The operation must be carried out after 3 minutes of cutting off the power supply, because the high-voltage charging part in the equipment is not discharged within 3 minutes. Working in a live state or working immediately after shutdown will cause the risk of electric shock.
	Danger High Voltage	Contact with live parts can cause serious personal injury or death.
	Danger Hot Surface	The human body or the heat-labile articles must keep away from this high temperature area. Otherwise, it will cause personal injury or property loss.

 **DANGER** Failure to take safety measures will result in death or serious personal injury.

Notice		Operation Guideline
 Must-do	Transport and installation	The equipment must be firmly fixed during transport and installation. Otherwise, there will be a danger of tipping or falling.
 Must-do	Electrical protection	The power cable terminal must be equipped with the electric leakage and overload protection device according to the rated current indicated on the equipment nameplate.
 Must-do	Stop running in abnormal state	When the equipment is abnormal, as long as the cause is not clear, it is forbidden to start. Otherwise, there is a danger of damage, electric shock, fire, and injury.
 Forbidden	Do not put fingers or other things into the gap of the equipment	There are rotating parts inside the device. Do not put fingers or other things into the gap of the equipment. Otherwise, it will cause personal injury.
 Must-do	Refrigerant leakage	a) When the refrigerant leaks, please make sure that the ventilation is available. Otherwise, it may cause anesthesia and suffocation if a large amount of refrigerant fills the enclosed space; b) Avoid contacting with skin, or it will cause frostbite.


 **DANGER** Failure to take safety measures will result in minor personal injury or property damage.

Notice		Operation Guideline
 Forbidden	Transportation with liquid is prohibited	The equipment is not allowed to be transported with liquid to prevent internal pipeline leakage.
 Must-do	Transport	a) The equipment should be fixed firmly before transportation to prevent the equipment from moving due to vibration and external forces. If there is excessive vibration and external force, the internal equipment may be damaged. b) Tilt angle should be $\leq 45^\circ$. Otherwise, the refrigeration system will fail.
 Forbidden	Operating environment	a) It is forbidden to use in special environments such as high temperature, humidity, strong electromagnetic interference, etc. b) The equipment must be installed in a place where there is no direct sunlight and away from the fire sources.
 Must-do	Installation	a) The equipment must be installed on a horizontal surface. Otherwise, the refrigeration system will fail; b) It is forbidden to place objects within 1 meters around the air inlet and 1.5 meters around the air outlet. If the air inlet and

		the air outlet are blocked, the cooling ability that the equipment should have cannot be realized.
 Must-do	Before commissioning	a) Make sure that the water supply pipe of equipment is not blocked; b) It is necessary to check the water pipe and the water pump to confirm that there is a proper amount of water entering the water pump and exhaust it through the water pump exhaust valve, otherwise it will cause damage to the water pump; c) Confirm that the state of the equipment is normal and safe, otherwise there may be injury and damage.
 Warning	Gently move the motor impeller if the equipment isn't used for a long time	For equipment that has not been used for a long time, it may be difficult to start the pump at the first start. Please gently move the motor impeller before the equipment is powered on.
 Forbidden	The equipment is forbidden to be trampled on	Please do not step on or sit on the equipment. Otherwise, it may cause injury accidents such as falling or overturning
 Must-do	Clean the air filter regularly	Clean the air filter at least once a week. If it is blocked, the cooling ability will decrease and the power consumption will increase, and the alarm will not work properly.
 Must-do	Equipment surface cleaning	a) Please use cleaning agents that are non-corrosive to metals and plastics; b) Please keep the cleaning agent properly after cleaning to prevent liquid leakage; c) The container for storing the cleaning agent must be sealed completely to avoid danger.
 Forbidden	No air blowing at the water outlet	A temp sensor is installed inside the water inlet, and it is forbidden to blow air inside the device with an air gun.
 Must-do	Wear protective gloves during maintenance, inspection and cleaning	a) The sharp edges of the condenser fins may cut the skin; b) The temperature of the internal compressor and refrigerant piping is very high, and direct skin contact may cause burns.
 Must-do	Anti-freezing	a) When the ambient temperature is lower than 0℃ and the machine is shut down for a long time, it is necessary to drain the liquid and blow the water away in the system with compressed air, otherwise there is a danger of freezing and cracking the components and pipelines. b) When room temperature is lower than 0℃, it is recommended to use antifreeze with a concentration of not more than 30% containing ethylene glycol or propylene glycol.
	Translation of the original instruction	This is Translation of the original instruction

I. Overview


This product is an industrial cooling device designed and manufactured for laser cutting, laser welding, laser marking, laser engraving and other equipment that uses laser processing. It can provide a temperature-stable cooling medium for the above application scenarios.

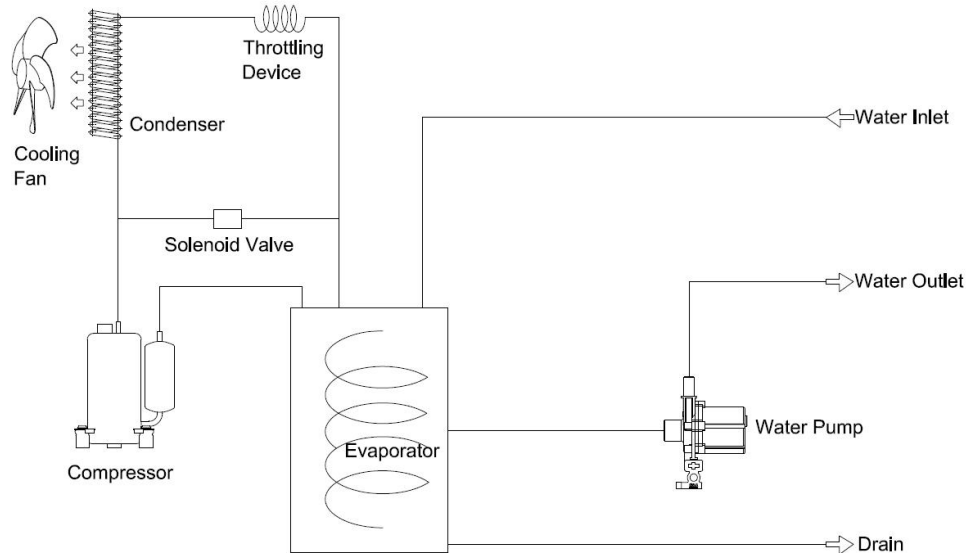

The chiller is composed of a compressor, a condenser, a throttling device (expansion valve or capillary), an evaporator, and a water pump. Its working principle is that the chiller's refrigeration system cools the water, and the water pump delivers the low-temperature cooling water to the equipment that needs to be cooled. Then the cooling water will take away the heat, heat up and return to the chiller, and then be cooled again and transported back to the equipment. In the refrigeration system of a chiller, the refrigerant in the evaporator coil absorbs the heat of the return water and vaporizes into steam. The compressor continuously extracts the generated steam from the evaporator and compresses it. The compressed high-temperature, high-pressure steam is sent to the condenser and later will release heat (heat extracted by the fan) and condense into a high-pressure liquid. After being reduced by the throttling device, it enters the evaporator to be vaporized, absorbs the heat of the water, and the whole process circulates constantly. Users can set or observe the working status of the water temperature through the temperature controller.


II. Model Illustration

CWFL- 1000 A N

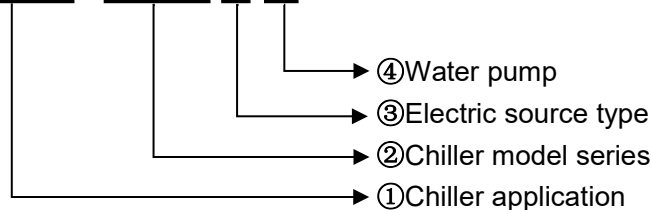

Note: This model description only contains the description of the company's main product codes, not all of them are listed. Please confirm with our company before ordering the specific model, our company has the final interpretation right about it.

III. Product Outlines & Parts

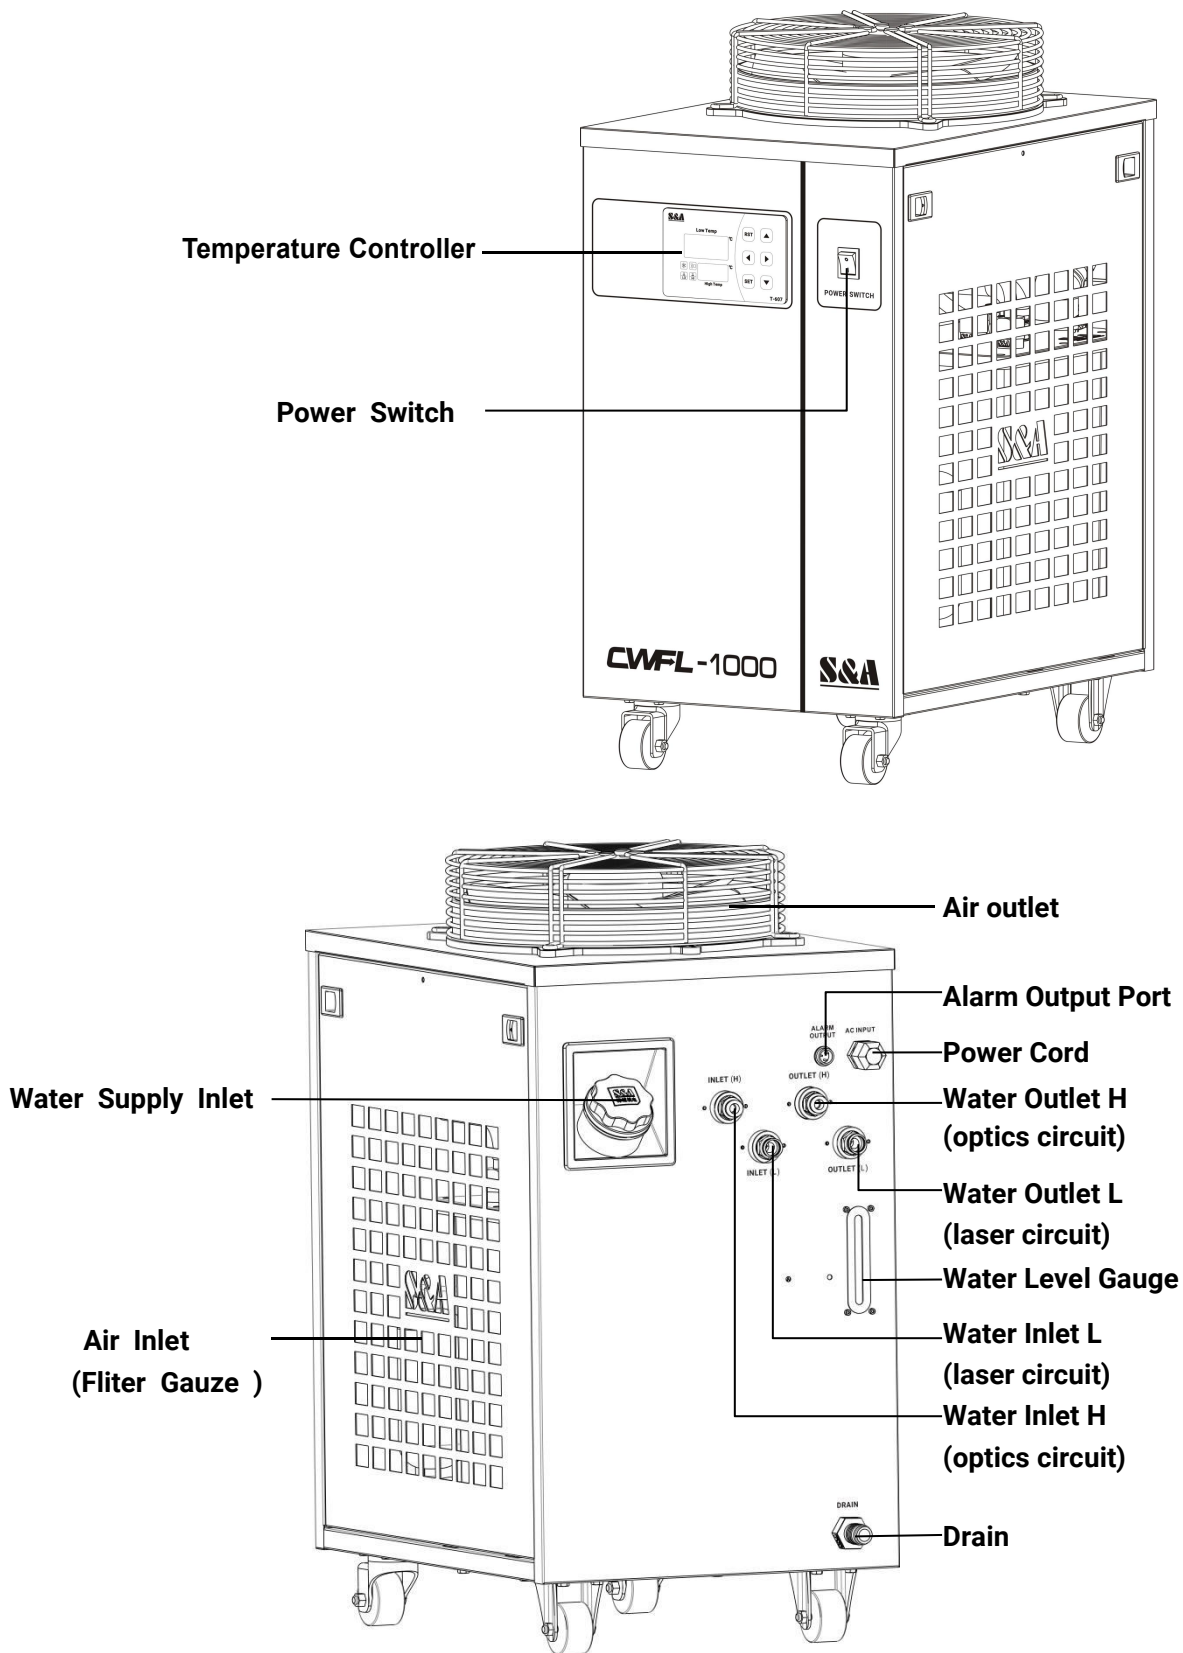

Note: The above-mentioned product outlines and part names are only for one of the models. The outlines and parts installation may be slightly different in different models.

IV. Installation

1. Open the package and check whether the machine is in good condition and whether the accessories are complete.

2. Please ensure that the working voltage of the chiller is stable and normal.

Because the refrigeration compressor is sensitive to the power supply voltage, the normal working voltage of our company's standard products is 210~240V (110V model is 100~120V). If wider operating voltage range is necessary, customization is available.

3. Equipment installation conditions and requirements.

(1) It must be installed on a horizontal surface and not tilted, as shown in Figure 1.


(2) When using the machine, please ensure that the casters are in a locked position to prevent the machine from slipping during operation. The brake device is typically installed on the wheel axle sleeve or the wheel surface and can be activated by either hand or foot. When pushing the machine, the wheels cannot move forward but can swivel, indicating the braking is correct, as shown in Figure 2.

(3) The air outlet of the chiller should be at least 1.5m away from the obstacle, and the air inlet must be at least 1m away from the obstacle (See below diagram), as shown in Figure 3.

(4) Do not install in harsh environments such as corrosive, flammable gas, dust, oil mist, conductive dust, high temperature and humidity, strong magnetic field, direct sunlight, etc, as shown in Figure 4.

(5) Operating Environment

Ambient Temperature	Ambient Humidity	Altitude
0~40℃	≤90%RH	≤3,000m

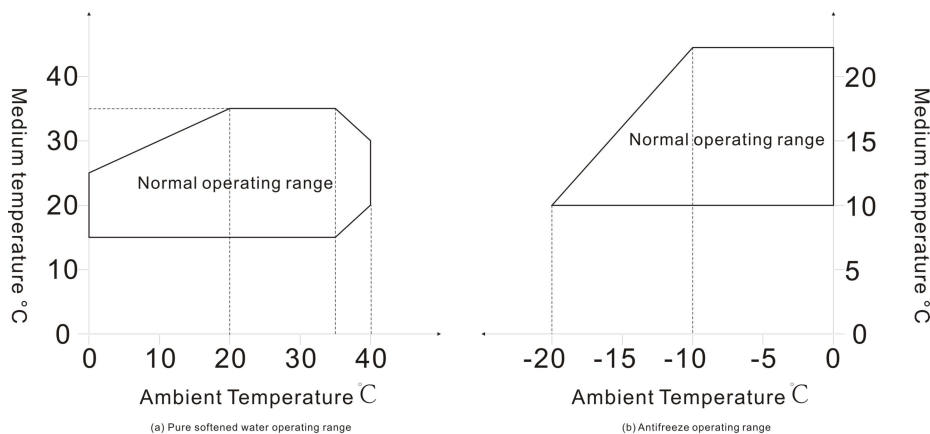

(6) Medium Requirements

Cooling medium allowed by the chiller includes purified water, distilled water, high-purity water and other softened water. It is forbidden to use oily liquids, liquids containing solid particles, corrosive liquids, etc. Clean the filter element and replace the cooling water regularly (about three months is recommended) to ensure the normal operation of the chiller.

When the chiller is stored with water at room temperature lower than 2℃, it is necessary to add anti-freezer in the chiller water tank. It is recommended to use antifreeze with a concentration of not more than 30% containing ethylene glycol or propylene glycol. After the temperature warms up, change to purified water, distilled water or other suggested cooling media, let the chiller run for 30 minutes to remove the residual anti-freezer and drain it, and then refill with unused circulating water.

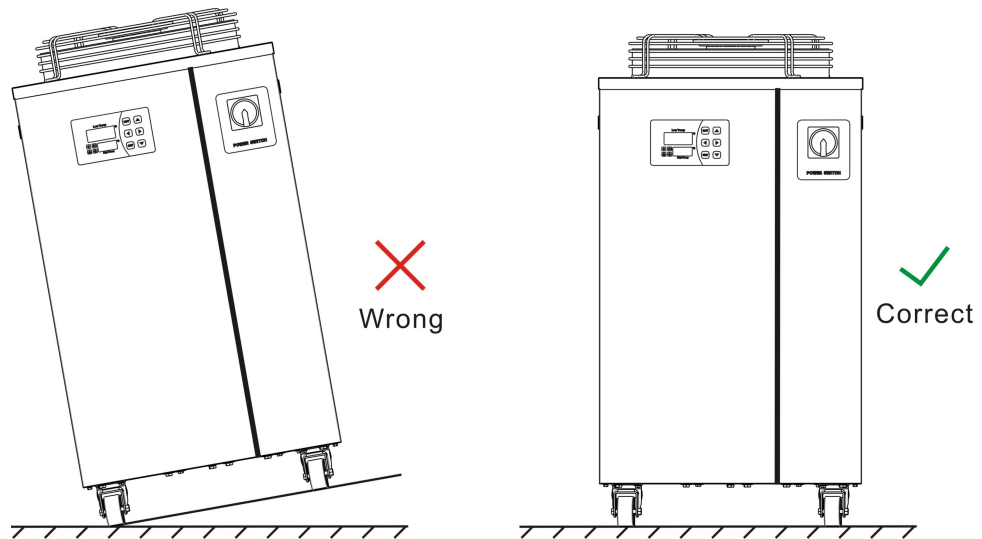


Figure 1: Form Requirements for Chiller Installation

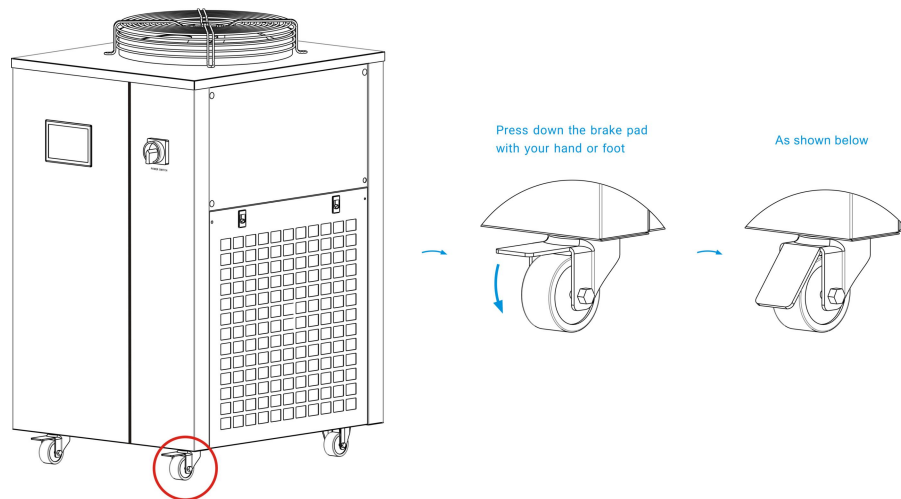


Figure 2: Illustration of Locking Casters

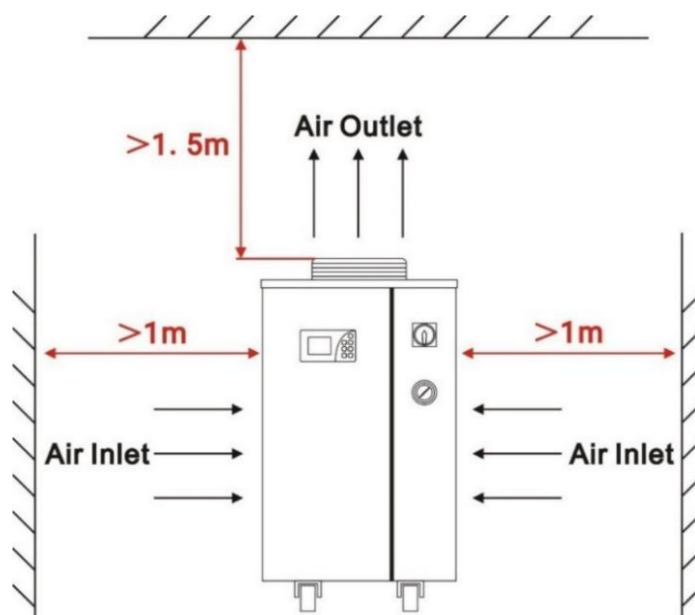


Figure 3: Space Requirements for Chiller Installation


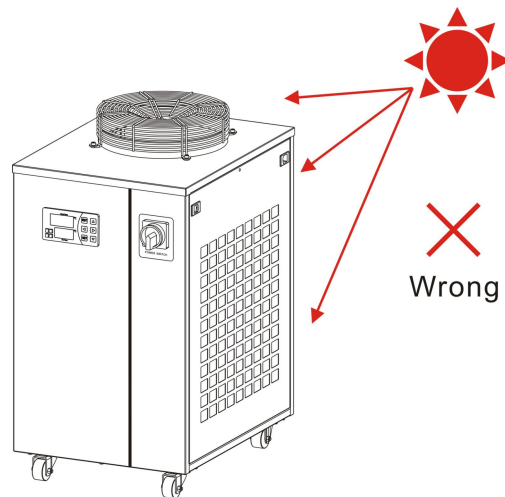


Figure 4: Environmental Requirements for Chiller Installation

4. Water Circuit Connection

- (1) Determine the layout direction of the pipeline based on the equipment's inlet and outlet markings, ensuring that the water pipes are clean and free from impurities to prevent blockages or pump malfunctions.
- (2) Caution: Do not blow air into the chiller water inlet to avoid disrupting machine operation, as shown in Figure 4.

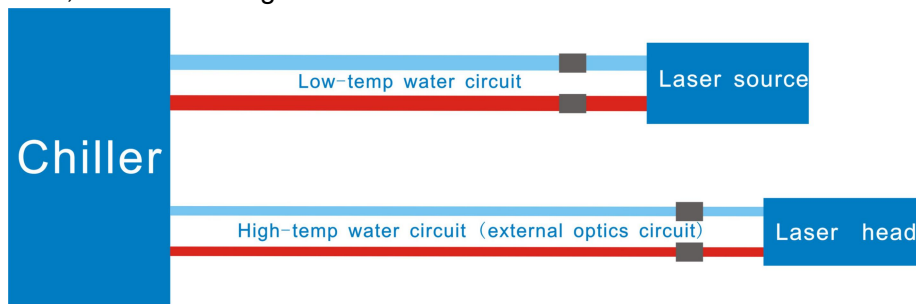

Note: For the chiller, the blue water pipe refers to the outlet water, and the red water pipe refers to the inlet water.

Figure 4: Environmental Requirements for Chiller Installation

- (3) Pipeline Connection: The method of connecting the chiller and the laser machine is illustrated in Figure 5. The inside diameter of the piping should not be smaller than the chiller's inlet and outlet pipe diameter. If the inside diameter of the piping is smaller than required, the approval of the chiller manufacturer should be obtained.

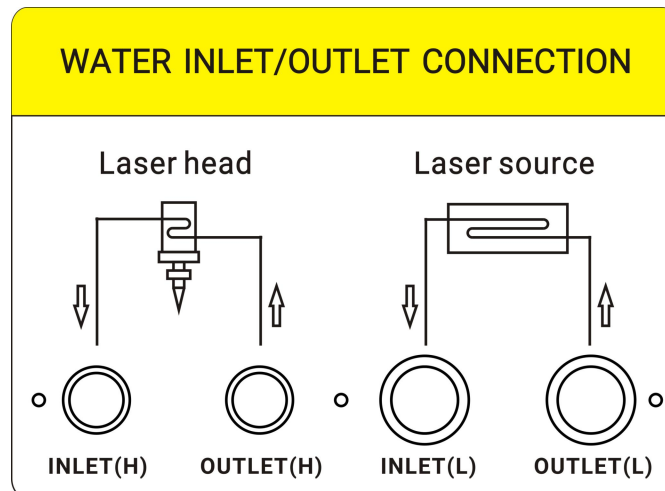


Figure 5: Water chiller to laser connection diagram

(4) Drain valve position, as shown in Figure 6.

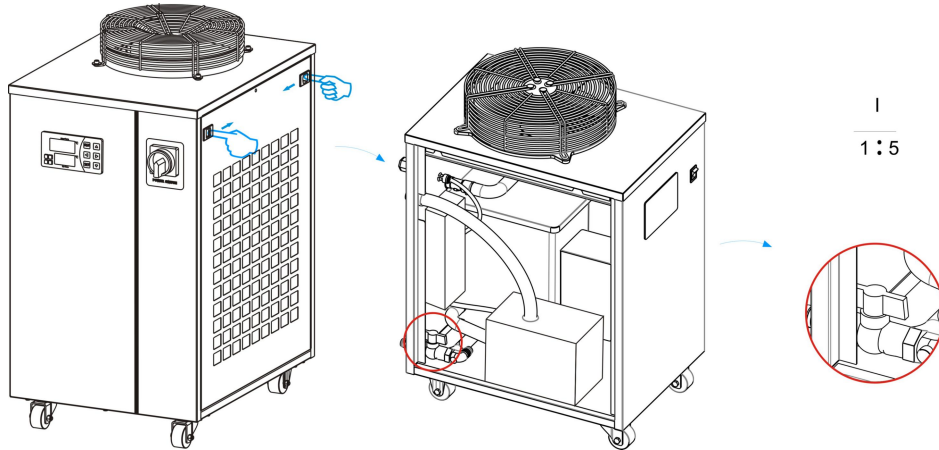


Figure 6: Drain valve position diagram

5. Plug in the power cord and turn on the power switch(It is forbidden to start without water).

(1) After turning on the power switch, the circulating pump of the chiller starts to work. When the new machine is turned on for the first time, there will be more air bubbles in the pipeline, which will cause the machine to alarm occasionally, and it will return to normal after a few minutes of operation.

(2) After starting the machine for the first time, check if the water pipes leaks immediately.

(3) After turning on the power, if the water temperature is lower than the set temperature, it is normal that the cooling fan and other devices of the machine do not work. The temperature controller will automatically control the working status of compressors, solenoid valves, cooling fans and other components according to the set parameters.

(4) As it takes a longer time to start over the compressor and other components, according to different conditions, the time is range from seconds to minutes, so do not turn off the power and again on frequently.

6. Electrical connection.

(1) Please select the cable based on the max. rated current indicated on the label of the chiller.

(2) Recommended reference standard for power cord diameter selection.

Rated current/ A	≤5	≤10	≤15	≤25	≤35	≤50
Wire diameter (copper wire)/ mm ²	1.0	1.5	2.5	4.0	6.0	10.0

Note: This data is provided according to IEC 60204-1 standard and only for reference. Standard cables must be used in the power cord.


(3) The main circuit of the power supply must be equipped with appropriate electric leakage and overload protection devices, and the chiller must be well grounded.

(4) Less than ±10% of power supply voltage fluctuation and less than ±1Hz of frequency fluctuation are allowed, and keep away from electromagnetic interference sources.

7. Fill Water & Exhaust Air.

(1) Fill Water

After the new machine is turned on, the air in the water pipe is emptied, and the water level of the water tank will drop slightly. In order to keep the water level in the green area, you can add water again. Observe and write down the current water level. After the chiller has been running for a period of time, observe the water level gauge again. If the water level drops significantly, check again if there is leakage in the water pipes.

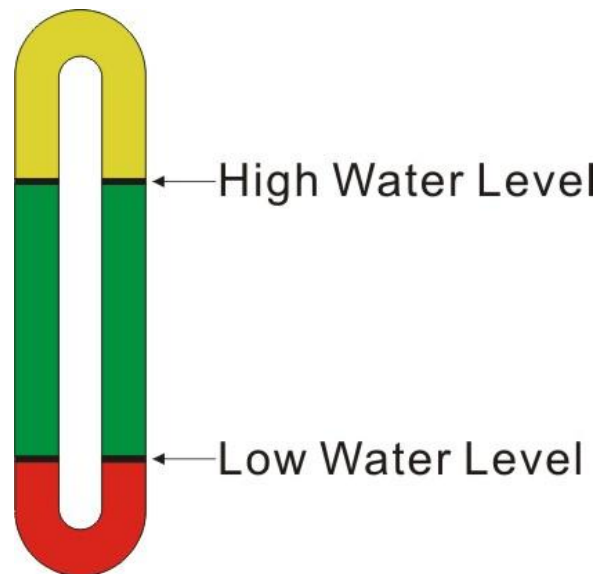

(2) Exhaust Air

After adding water for the first time or replacing water, exhaust the air in the water pump to start use, otherwise the equipment will be damaged. The exhaust method is as follows:
Method 1: Under the state of shutting down, after adding water, remove the water outlet and connect the water pipe, drain for 2 minutes, and then install it firmly.

Method 2 : Open the water supply inlet, after starting the machine (water flows), repeatedly press and fold the water pipe several times to drain the air from the pipe.

8.Test-run Check.


- (1) Check whether the pipeline connection is correct, and there must be no bubbling or water leakage;
- (2) Check whether the inlet and outlet water ball valves are open and the drain valve is closed;
- (3) Check the liquid level of the water tank;
- (4) Confirm that the electrical wiring of the equipment is connected correctly;
- (5) Confirm whether the equipment is grounded.

V.Storage Instructions

- 1. Ensure the equipment's surface is clean, use an air gun to remove internal dust, wipe off oil stains, and protect the exterior with a cover to prevent dust, oil, or moisture buildup.**
- 2. If the equipment is manufactured with wheels, lock them securely to prevent sliding and potential damage during storage.**
- 3. Store the machine on a level, dry, and well-ventilated surface, away from dust, rain, and corrosive or flammable gases. Avoid harsh environments with oil mist, conductive dust, high humidity, strong magnetic fields, direct sunlight, or extreme temperatures.**
- 4. Maintain ambient temperature between 0 to 40°C (32 to 104°F) and humidity below 90%RH.**

VI. Operating States &Parameters Adjustment

- 1. Temperature control panel introduction**

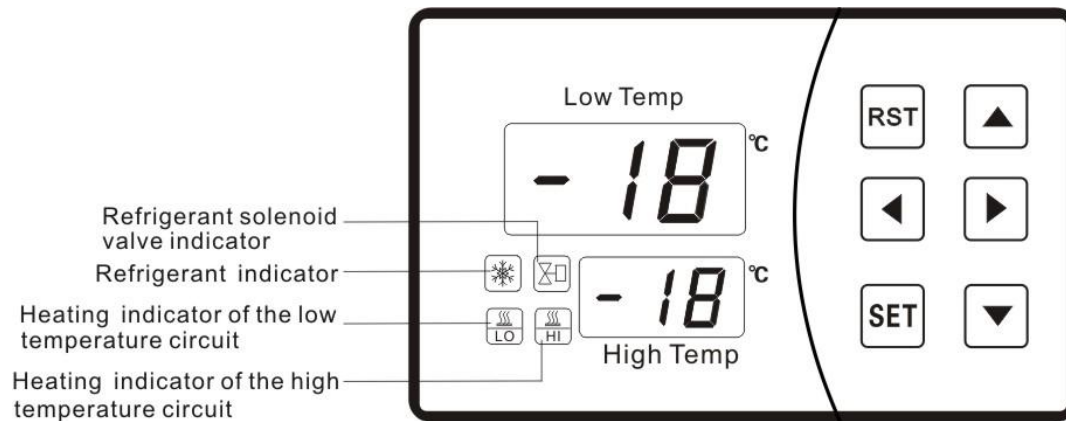

2. Working status indicator of the temperature controller

Refrigeration indicator: during refrigeration, the indicator is on; In constant temperature status, the indicator is off; During delay, the indicator flashes.

Refrigerant solenoid valve indicator: the indicator is on when connected and it's off when disconnected

Heating indicator of the low temperature circuit: the indicator is on when connected and it's off when disconnected.

Heating indicator of the high temperature circuit: the indicator is on when connected and it's off when disconnected.

3. Rapid adjustment:

Press "SET" button to set the temperature of the low temperature circuit. The low temperature window indicates F0 (F1 in intelligent control mode) and the high temperature window flashes with real-time value. Press or buttons to change the value and save. Press "SET" button again to set the temperature of the high temperature circuit. The low temperature window indicates F4 (F5 in intelligent control mode) and the high temperature window flashes with real-time value. Press or buttons to change the value and save. Press "RST" button to save the data and exit.

4. Press key once to enter status display menu and it indicates t1 which suggests temperature of room temperature probe.

Press key twice to indicate t2 which suggests flow rate of the low temperature circuit. ((L/min, resolution rate=0.1)

Press key twice to indicate t3 which suggests flow rate of the high temperature circuit. ((L/min, resolution rate=0.1)

Press key three times to return to normal operation.

5. In the first connection, press button to cancel delay time and connect the compressor.

6. User data setting (F0~F16 available):

The and buttons are for changing and storing data. The and buttons are for changing items. Press and hold "SET" and buttons simultaneously for 6 seconds to enter data setting. The lower window indicates "PAS" while the upper window

indicates “00”. Press \triangle and ∇ buttons to change the password (08). Press “SET” button. If the password is incorrect, the lower window will indicate F0 and then data changing is available. If the password is incorrect, it will return to temperature display. If there is no button pressed in 20 seconds, the temperature controller will automatically exit from the data setting status. Press “RST” button to save the data and exit.

7. Restore factory setting:

Press and hold \triangle and ∇ buttons for 3 seconds and it indicates “rE” and the supplier data and user data will restore to default value. Continue to press those buttons for another 3 seconds, it will return to temperature display.

8. Parameter setting table


Data	Function	Range	Default value	Description	Remark
F0	Setting temperature of low temperature circuit	-20~40.0℃	25.0℃	Setting menu of low temperature circuit	
F1	Temperature difference coefficient	-15.0- 05.	-02.0		
F2	Refrigeration return difference	0.1~3.0℃	0.8℃		
F3	Control mode	00~01	00		01=intelligent control mode 00=constant temperature control mode
F4	Setting temperature of high temperature circuit	-20~40.0℃	30.0℃	Setting menu of high temperature circuit	
F5	Temperature difference coefficient	-15.0~5.0	-2		
F6	Refrigeration return difference	0.1~3.0℃	0.8℃		
F7	Control mode	00~01	01		01=intelligent control mode 00=constant temperature control mode
F8	Ultrahigh water temperature alarm	1.0~60.0℃	10.0℃	Shared by high & low temperature circuit	
F9	Ultralow water temperature alarm	1.0~20.0℃	15.0℃		
F10	Ultrahigh room temperature alarm	40.0~50.0℃	45.0℃		
F11	Highest water temperature under intelligent control mode	F12~40.0℃	30.0℃		Intelligent control mode valid
F12	Lowest water temperature under intelligent control mode	1.0℃~F11	20.0℃		
F13	Password	00~99	08		00=cancel password function
F14	Water flow alarm of low temperature	0.0~20.0	2.0L/min		

	circuit				
F15	Water flow alarm of high temperature circuit	0.0~20.0	0.5L/min		
F16	Communication address	1~247	1		

VII. Alarm & Output Terminal

In order to guarantee the equipment will not be affected while abnormal situation happens to the chillers, the chillers are designed with alarm protection function.

1. Alarm output terminals and wiring diagram.

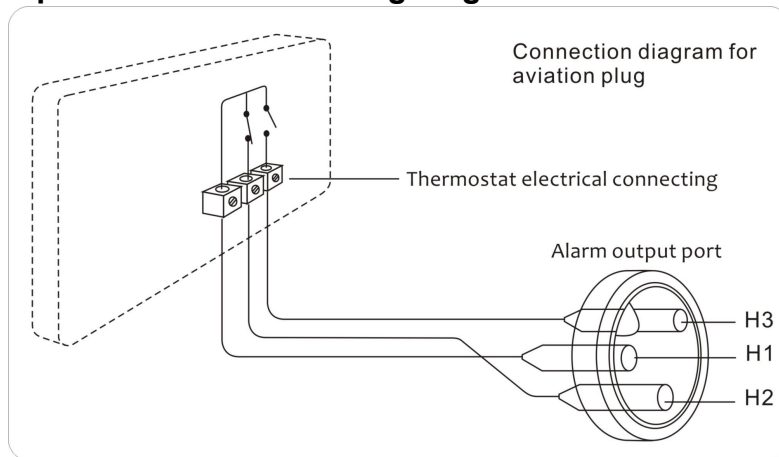

2. Alarm causes and working status table.

Condition	Display	Alarm code	Buzzer	OUT H1、H2	OUT H1、H3
Circulating pump works properly				DISCONNECTION	BREAKOVER
Ultrahigh ambient temperature alarm		E1	Sounds	BREAKOVER	DISCONNECTION
Ultrahigh water temperature alarm of laser circuit		E2	Sounds	BREAKOVER	DISCONNECTION
Ultralow water temperature alarm of laser circuit		E3	Sounds	BREAKOVER	DISCONNECTION
Ultrahigh water temperature alarm of optics circuit		E4	Sounds	BREAKOVER	DISCONNECTION
Ultralow water temperature alarm of optics circuit		E5	Sounds	BREAKOVER	DISCONNECTION
Ambient temperature sensor failure		E6	Sounds	DISCONNECTION	BREAKOVER
Water temperature sensor failure of laser circuit		E7	Sounds	BREAKOVER	DISCONNECTION
Water temperature sensor failure of optics circuit		E8	Sounds	BREAKOVER	DISCONNECTION
Liquid level alarm		E9	Sounds	BREAKOVER	DISCONNECTION
External input alarm 2		E10	Sounds	BREAKOVER	DISCONNECTION
Flow alarm of laser circuit		E11	Sounds	BREAKOVER	DISCONNECTION
Flow alarm of optics circuit		E12	Sounds	BREAKOVER	DISCONNECTION
Chiller power failure				BREAKOVER	DISCONNECTION


Note: The alarm output port is connected with a set of normally open and normally closed contacts of the relay inside the machine. The working current should be smaller than 3A while the working voltage should be smaller than 300V.

VIII. Maintenance

The equipment must be shut down for maintenance, and the power supply must be cut off. The operation can only be carried out after 3 minutes, otherwise there will be a risk of electric shock. When the room temperature is lower than 2°C, the internal water must be drained when the machine is shut down for a long time.


1. Remove Dust Regularly

Regularly disassemble the filter gauze for cleaning and use a compressed air gun to blow away the dust on the condenser (about 1 week is suggested and the air filter must not be missing for a long time).

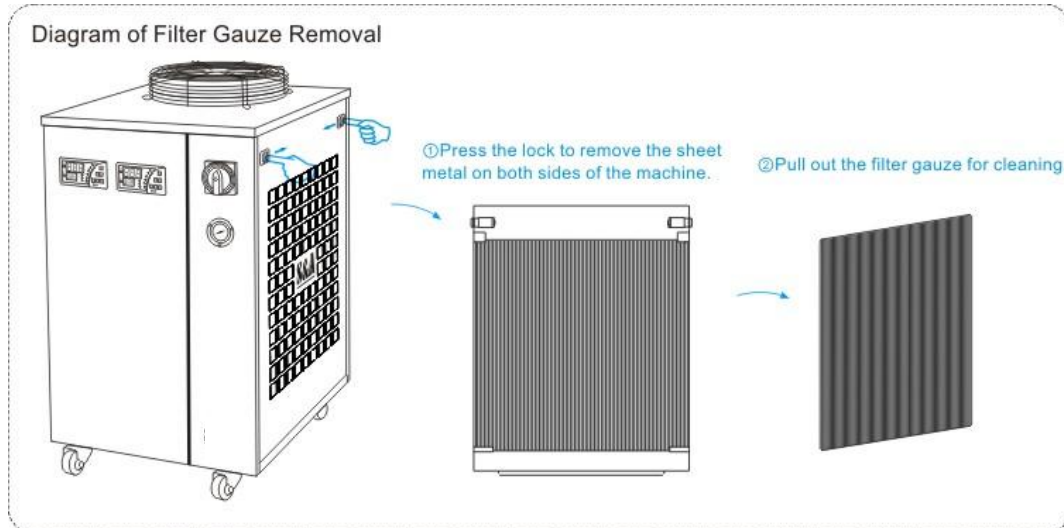

2. Guarantee Water Quality

A certain amount of impurities will accumulate in the filter element over a period of time, which will cause a decrease in water flow, or even a secondary pollution. Therefore, it is necessary to clean or replace the filter element regularly.

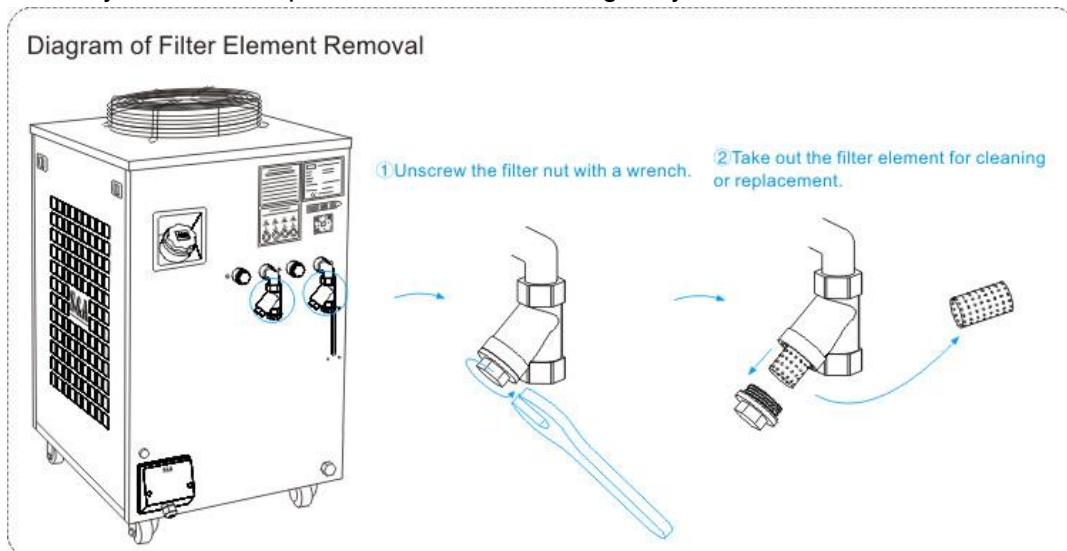


IX. Simple Troubleshooting

Failure	Failure Cause	Approach
Machine turned on but unelectrified	Power cord is not plugged in place	Check and ensure the power interface and the power plug is plugged in place and in good contact.
	Fuse burnt-out	Open the electric box cover, check the fuse and replace with a spare one if necessary. Check whether the power supply voltage is stable; Check and ensure the power interface and the power plug are in good contact.
Flow Alarm, Use a water pipe to directly connect to the water outlet and inlet but still without water flowing	Water level in the water tank is too low	Check the water level gauge display, add water until the level shows in the green area; And check whether water circulation pipe leaks.
Flow alarm occurs while chiller is connecting to other equipment, but there is water flowing and no alarm when a water pipe is directly connected to the chiller water outlet and inlet.	Water circulation pipes are blocked or a pipe bending deformation.	Check water circulation pipe
Ultrahigh water temperature alarm.	Blocked dust gauze, bad thermolysis	Disassemble and clean the dust gauze regularly
	Poor ventilation for air outlet and inlet	To ensure a good ventilation for air outlet and inlet
	Voltage is extremely low or unstable	To improve the power supply circuit or use a voltage regulator
	Improper parameter settings on thermostat	To reset controlling parameters or restore factory settings
	Switch the power on and off frequently	To ensure there is sufficient time for refrigeration (more than 5 minutes)
	Excessive heat load	Reduce the heat load or use other model with larger cooling capacity
Ultrahigh room temperature alarm.	The room temperature is too high for the chiller	To improve the ventilation to guarantee that the machine is running below 40℃ room temperature.
Serious problem of condensate water	Water temperature is much lower than ambient temperature, high humidity	Increase water temperature or to preserve heat for pipeline
Water drains slowly from drain port during water changing	Water supply inlet is not open	Open the water supply inlet
Startup flow alarm	Bubble in the water pipe	Exhaust the air

Attachment – Schematic

CWFL-800、1000A/BNS03

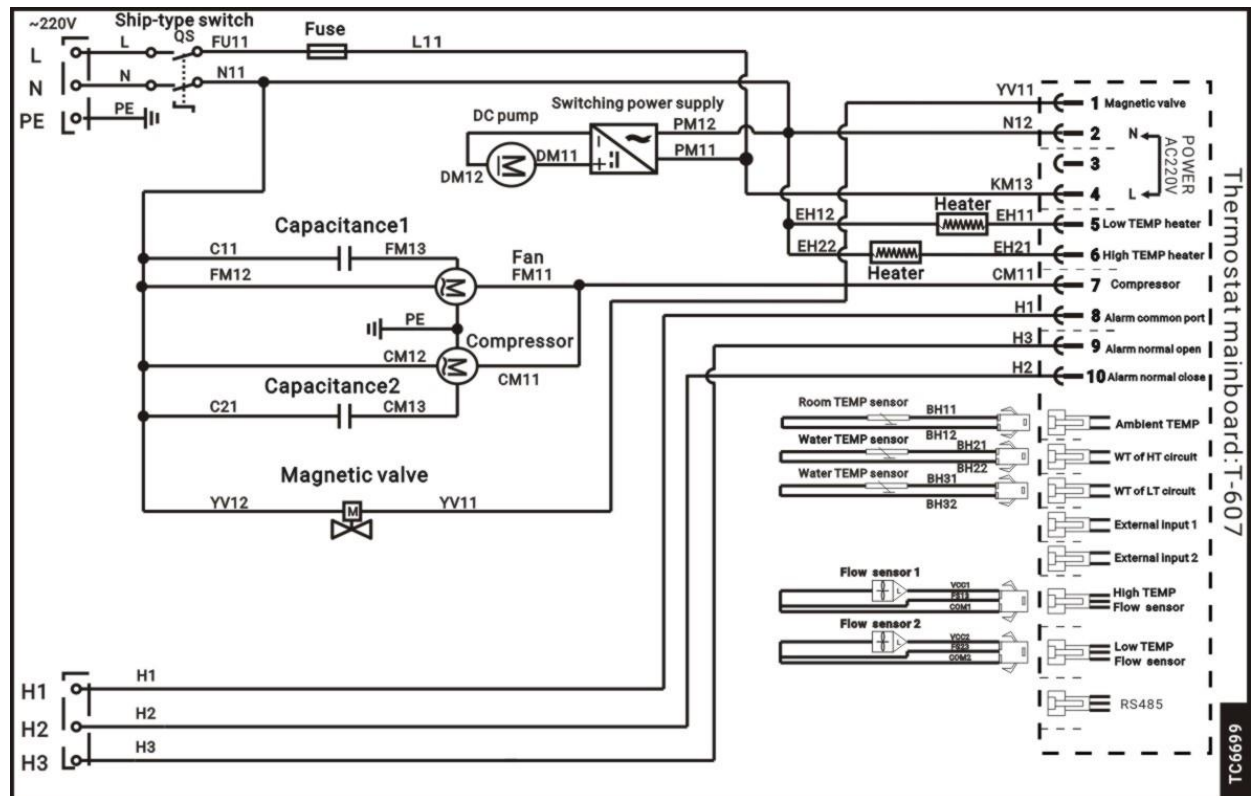

CWFL-1500A/BNS03

